



[Click here](#)


BK AMPUTATION

(Transtibial)

To determine the most suitable size for the patient, the measurement protocol consists of measuring the length of the trimmed liner, then the circumference at a specific height.


STEP 1

Which length ?

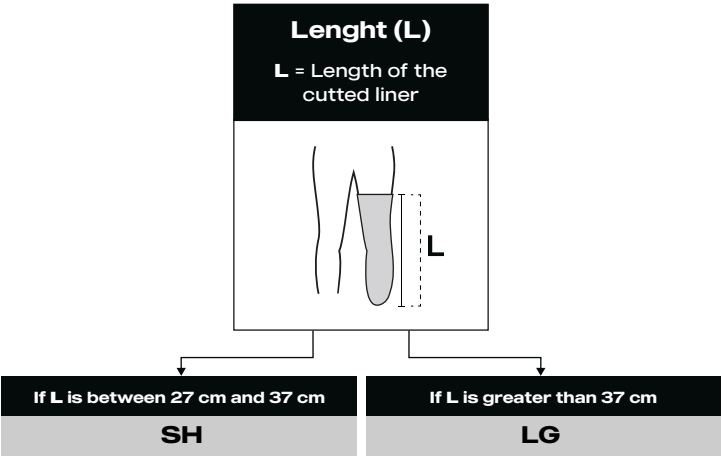

STEP 2

Wich size ?

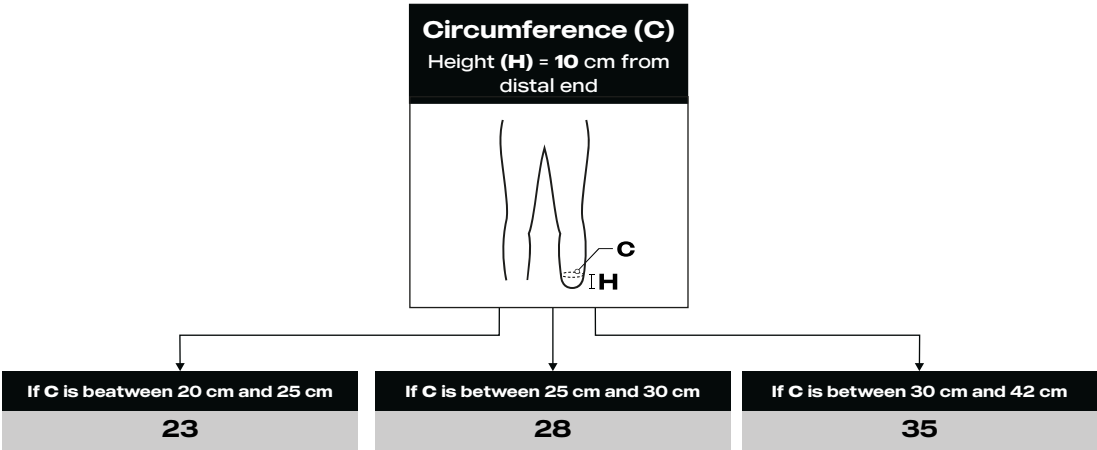

Circumference (C)	Length (L)	Code
20-25 cm	27-37 cm	UDTT-23-SH-C
	+37 cm	UDTT-23-LG-C
25-30 cm	27-37 cm	UDTT-28-SH-C
	+37 cm	UDTT-28-LG-C
30-42 cm	27-37 cm	UDTT-35-SH-C
	+37 cm	UDTT-35-LG-C

See next page for

Underlay TT Open →



[Click here](#)


BK AMPUTATION

(Transtibial)

To determine the most suitable size for the patient, the measurement protocol consists of recording two circumferences at specific heights: one without a liner and one with a liner. Then measure the length of the trimmed liner.


STEP 1

Wich size ?

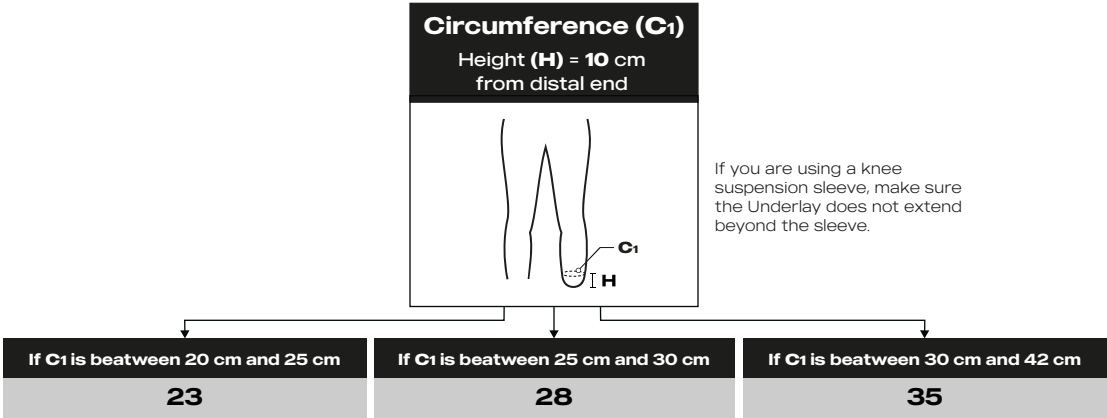


STEP 2

Wich version ?

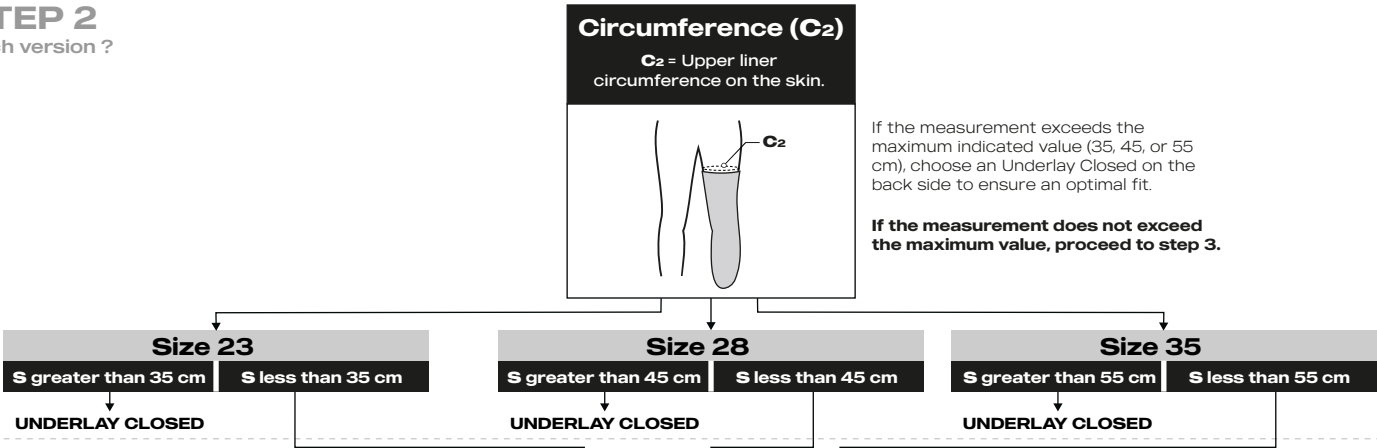

STEP 3

Wich length ?

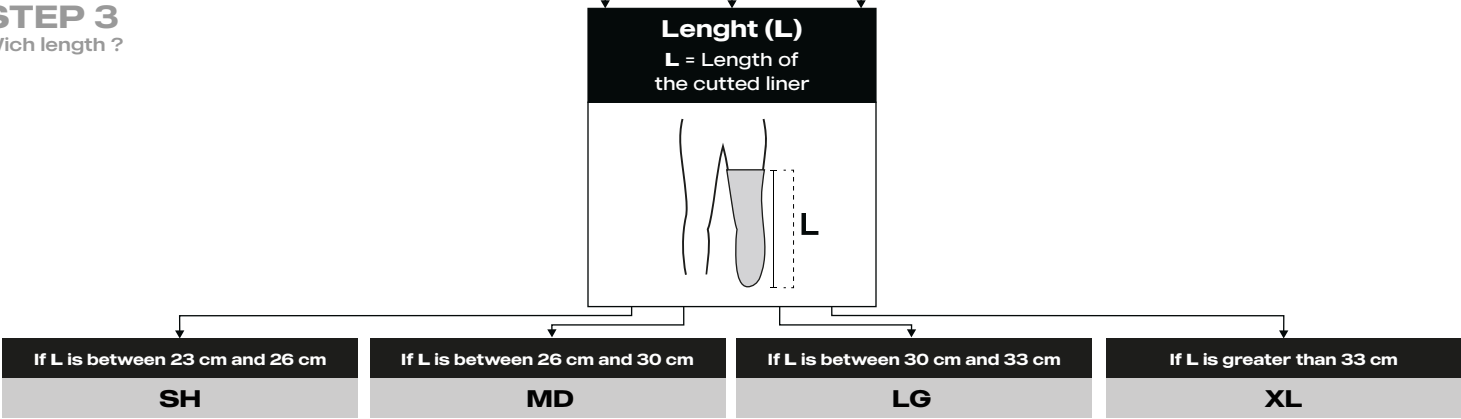

Circumference (C ₁)	Length (L)	Code
20-25 cm	23-26 cm	UDTT-23-SH
	26-30 cm	UDTT-23-MD
	30-33 cm	UDTT-23-LG
	33+ cm	UDTT-23-XL
25-30 cm	23-26 cm	UDTT-28-SH
	26-30 cm	UDTT-28-MD
	30-33 cm	UDTT-28-LG
	33+ cm	UDTT-28-XL
30-42 cm	23-26 cm	UDTT-35-SH
	26-30 cm	UDTT-35-MD
	30-33 cm	UDTT-35-LG
	33+ cm	UDTT-35-XL

EN

See next page for

Underlay TT Closed →